

# ECHO by DEVOX



Elevate your external / internal spaces  
with luxurious light weight durable two tone wall cladding

DEVOX is delighted to introduce its newest range of two-tone WPC (Wood Plastic Composite) wall cladding. This light weight premium timber alternative is designed to transform the look of your space.




DEVOX

## AVAILABLE COLOUR RANGE

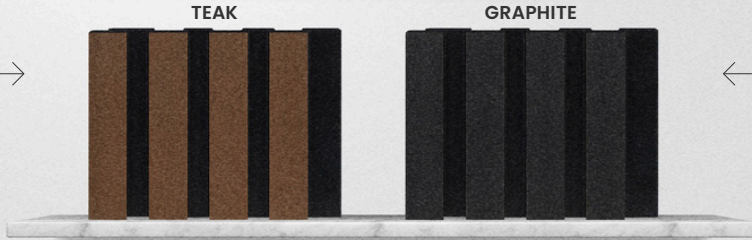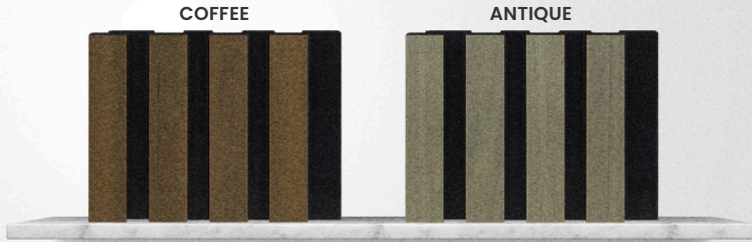

## DIMENSIONS & TECHNICAL DRAWING



All dimensions are in mm.

## SPECIFICATIONS

Standard length	2700 mm	3000 mm
Dimensions	177mm x 13mm	177mm x 13mm
Weight per board	5.1 kg	5.7 kg
Weight per sqm	10.7 kg	
Hidden fixing	Possible	Possible

## APPLICATIONS

- Entrances
- Kitchen bar backs / bulkhead
- Ceilings
- Office Space
- Balconies
- Feature Walls
- Eaves and Alfresco
- Public space

## FEATURES AND BENEFITS

- + Range of colours to choose from
- + Pre-finished
- + Easy installation
- + Easy maintenance
- + Available in two sizes






Panel color: Teak

# INSTALLATION GUIDE

## ACCESSORIES




Starter Piece




Corner Piece



Stainless  
Steel Clips

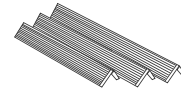

L-Piece Angles




Screws  
Zenith 8-10 x 30mm  
Galvanised Countersunk  
Rib Head Timber

## TOOLS AND MATERIALS NEEDED



Spirit level

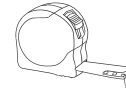

Measuring  
tape




Impact drill



Circular saw



Carpenter's  
pencil

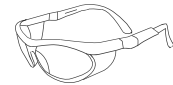

Safety gear  
(Gloves, Safety glasses)

## BEFORE YOU BEGIN

**INSPECT PANELS:** Ensure all ECHO panels are in good condition before installation

## INSTALLATION STEPS




### 1. Measure and Plan

- Measure the wall area to determine the number of panels needed.
- Plan the layout, considering the design and any cut-outs required.



### 2. Wall Preparation

- Ensure the wall is clean, dry, and free of dust.
- Repair any wall imperfections and make sure the surface is smooth.



### 3. Layout

- Use a level and pencil to mark a level line on the wall to guide the installation.
- Determine the starting point for the first panel.



### 4. Cutting Panels

- Measure and mark any necessary cuts for corners or outlets.
- Use a circular saw to cut the panels to the required size.




### 5. Install Corner Trim (if applicable)

- If your panels require corner trim, install it at the corners of the wall.



### 6. Mount Panels

- Place the panel onto the wall, aligning it with the marked level line.
- Press the panel firmly against the wall to ensure proper adhesion.



### 7. Secure Panels

- Secure the panels with screws.



### 8. Repeat the Process

- Continue installing panels, interlocking, and overlapping them.
- Ensure a snug fit and maintain consistent spacing.



### 9. Finishing Touches

- Trim panels as needed for a neat finish.
- Wipe off any excess adhesive with a damp cloth



### 10. Final Inspection

- Step back and inspect the installed panels for any visible issues.

## CONTACT US TODAY

Phone: 02 8000 0085  
0497 637 092

Address: 10 Lancaster Street,  
Ingleburn NSW



Panel color: Coffee