

HORIZON by DEVOX

Elevate the look of your outdoor space with our luxurious durable fencing panels set.

Introducing DEVOX's new range of WPC (Wood Plastic Composite) fencing. A luxurious timber alternative designed to completely transform the look of your space.

Tongue and groove joining system making it easy to install, providing seamless joining.




DEVOX

AVAILABLE COLOUR RANGE



DIMENSIONS & TECHNICAL DRAWING

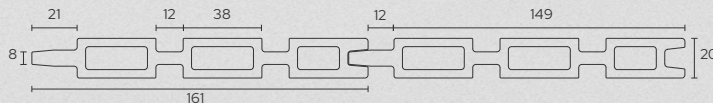

All dimensions are in mm.

SPECIFICATIONS

Standard length	1830 mm
Dimensions	161mm x 20mm
Weight per board	4.00 kg
Weight per sqm	14.4 kg
Hidden fixing	Possible

APPLICATIONS

- Partitions
- Fencing
- Balconies
- Public space

FEATURES AND BENEFITS


- + Range of colors to choose from
- + Pre-finished
- + Easy installation
- + Easy maintenance
- + Environment friendly




Panel color: Grey

INSTALLATION GUIDE


ACCESSORIES

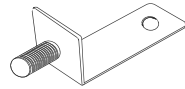


Crossbar Angle Yards

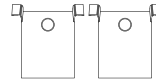


Plastic Cover

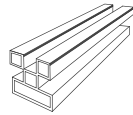


Column

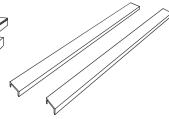


Column Cover

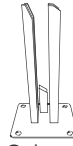


Column
Iron Seat

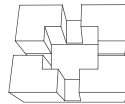


Pedestal

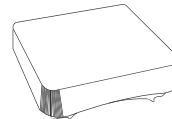

Column Caps

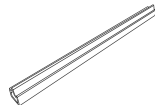

Bottom Bracket

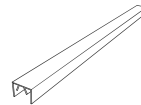

Upper Bracket


REQUIRED TOOLS & EQUIPMENT



Spirit level



Impact drill

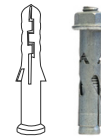

8 x 65mm
Sleeve Anchor
Galvanised



Safety gear
(Gloves, Safety glasses)


BEFORE YOU BEGIN

INSPECT PANELS: Ensure all HORIZON panels are in good condition before installation


INSTALLATION STEPS




Step 1:
Clean the area and measure the space where the panels will be placed.

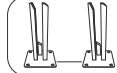


Step 2:
Determine where the base is to be placed and mark the location.

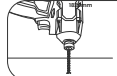


Step 3:
Remove the base and use an impact driver to drill four holes in the floor of the markings to drill a total of four holes.

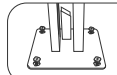


Step 4:
Put the expansion screws through the holes in the base and tap into the pre-drilled holes underneath with a hammer.

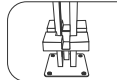


Step 5:
Slip in the large plastic base.

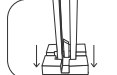


Step 6:
Seal the aluminum alloy column and column edge set into the base to keep it vertical, this accessory can strengthen the stability of the column.

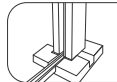


Step 7:
Align the slots of the columns on both sides, slide down the inserts and install the bottom bracket.

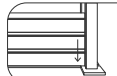

Step 8:
Slide the fence panels from the top into the grooves embedded in the lower compression strips after aligning the sides of the fence panels with the post grooves.

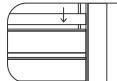

Step 9:
Align the slots from the top and slide in the upper compression strips to nestle into the fence panels.

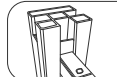

Step 10:
First, respectively, L-type corner code embedded into the upper pressure strip ends, pay attention to the direction of the corner code; Then the plastic sealing slide embedded in the column groove, and finally the column cap on the column, the installation is complete.

CONTACT US TODAY

Phone: 02 8000 0085
0497 637 092

Address: 10 Lancaster Street,
Ingleburn NSW



Panel color: Coffee