


# EMERGE by DEVOX


Elevate your external / internal spaces  
with luxurious durable wall cladding

Introducing DEVOX's new range of WPC (Wood Plastic Composite) wall cladding. A luxurious timber alternative designed to completely transform the look of your space. Engineered and purpose-built for resilience in Australia's harsh conditions, reinforced to withstand flex and bowing. Tongue and groove joining system making it easy to install, providing seamless joining.

## AVAILABLE COLOUR RANGE

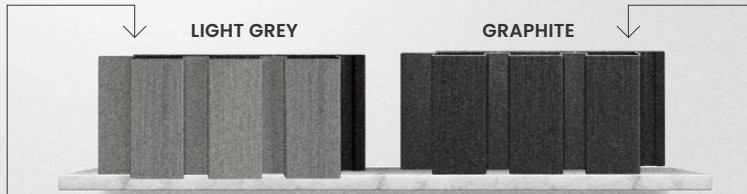

### DIMENSIONS & TECHNICAL DRAWING

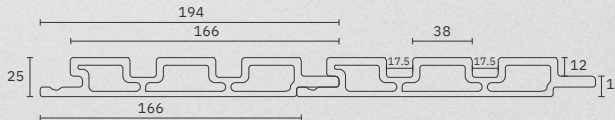

All dimensions are in mm.

## SPECIFICATIONS

Standard length	2700 mm	3000 mm
Dimensions	194mm x 25mm	194mm x 25mm
Weight per board	7.0 kg	7.9 kg
Weight per sqm	13.6 kg	13.6 kg
Hidden fixing	Possible	Possible

## APPLICATIONS

- Entrances
- External Wall
- Pool Fencing
- Garage Doors
- Public spaces
- Kitchen bar backs, bulkhead
- Ceilings
- Office Space
- Balconies
- Feature Walls
- Eaves and Alfresco

## FEATURES AND BENEFITS


- + Range of colours to choose from
- + Pre-finished
- + Easy installation
- + Easy maintenance
- + Environment friendly
- + Available in two different sizes



Panel color: Graphite

# INSTALLATION GUIDE


## ACCESSORIES

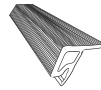


Starter Piece



Corner Piece

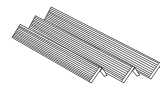


Angle Piece



Screws

Zenith 8-10 x 30mm  
Galvanised Countersunk Rib  
Head Timber

## TOOLS AND MATERIALS NEEDED

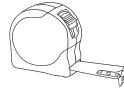

Measuring Tape



Carpenter's Pencil



Impact drill



Spirit level



Safety gear  
(Gloves, Safety glasses)



Circular Saw

## BEFORE YOU BEGIN

**INSPECT PANELS:** Ensure all EMERGE panels are in good condition before installation

## INSTALLATION STEPS



### 1. Measure and Plan

- Measure the wall area to determine the number of panels needed.
- Plan the layout, considering the design and any cutouts required.



### 2. Wall Preparation

- Ensure the wall is clean, dry, and free of dust.
- Repair any wall imperfections and make sure the surface is smooth.



### 3. Layout

- Use a level and pencil to mark a level line on the wall to guide the installation.
- Determine the starting point for the first panel.



### 4. Cutting Panels

- Measure and mark any necessary cuts for corners or outlets.
- Use a circular saw or jigsaw to cut the panels to the required size.



### 5. Install Corner Trim (if applicable)

- If your panels require corner trim, install it at the corners of the wall.



### 6. Mount Panels

- Place the panel onto the wall, aligning it with the marked level line.
- Press the panel firmly against the wall to ensure proper adhesion.



### 7. Secure Panels

- Secure the panels with screws.



### 8. Repeat the Process

- Continue installing panels, interlocking, and overlapping them.
- Ensure a snug fit and maintain consistent spacing.



### 9. Final Inspection

- Step back and inspect the installed panels for any visible issues.

## CONTACT US TODAY

Phone: 02 8000 0085  
0497 637 092

Address: 10 Lancaster Street,  
Ingleburn NSW



Panel color: Light grey